
4010 FIRE ALARM SYSTEM OPERATING INSTRUCTIONS FOLLOWING AN ALARM/TROUBLE/SUPERVISORY CONDITION



YOUR SAFETY AND THE SAFETY OF THOSE AROUND YOU ALWAYS COMES FIRST. Actions taken during a fire depend upon local practices. Be sure you know what to do

RED LED IS FLASHING AND TONE-ALERT IS PULSING

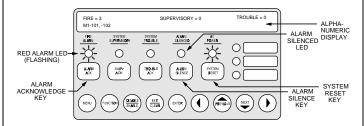

Unlock and open the panel door. Read and follow the instructions on the display. It will toggle between Screens 1 and 2.

FIRE = 3 SUPERVISORY = 0 TROUBLE = 0 SCREEN 1 M1-101, -102

FIRE = 3 SUPERVISORY = 0 TROUBLE = 0 SCREEN 2 ** FIRE ** Press ACK to review

- Press the (ALARM ACK) key under the flashing red LED. Read the 2. alphanumeric display.
 - The tone-alert is silenced and the display shows pertinent report information, such as shown below.

SCREEN 3

ALARM

First Floor East Wing Room 12 Smoke Detector Alarm 1/3

Read the Alarm information on the display. Summon appropriate personnel to respond.

HOW TO SILENCE THE SIGNALS

- Press the (ALARM SILENCE) key and read the display. The alphanumeric display shows signal status.
 - ALARM SILENCED LED turns ON steady.

HOW TO RESET THE SYSTEM

- When the alarm condition clears, restore or replace all affected devices (smoke detectors, pull stations, etc.) in accordance with the instructions provided with each device.
- Reset the system.
 - Press the (SYSTEM RESET) key.


The system displays the following after a completed System Reset with no alarms present:

No Alarms Present, System Reset Complete Restore previous screen, press any key

Press any key to return to the SYSTEM NORMAL screen.

TROUBLE/SUPERVISORY

YELLOW LED IS FLASHING AND TONE-ALERT IS ON STEADY

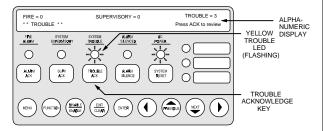

Note: A Trouble Condition is described in this example. A Supervisory Condition is handled in a similar manner.

Unlock and open panel door. Read and follow the instructions on the display (see example below).

> FIRE = 0 SUPERVISORY = 0 TROUBLE = 3 ** TROUBLE ** Press ACK to review

Press the (TROUBLE ACK) key under the flashing yellow LED. Read the Trouble information on the display (see example below).

> First Floor East Wing Room 12 1/3 Smoke Detector Trouble

- Summon appropriate personnel to respond.
- Response personnel should restore or replace the defective device (switch, wire, notification appliance, etc.) in accordance with device instructions (see the 574-709 manual for additional information on "dirty" or "excessively dirty" troubles. Refer to 526-444 label for appropriate publications and revisions).
 - If necessary, press (SYSTEM RESET) when the abnormal condition has been corrected.
 - After a short delay, the system returns to normal and displays the following.

** SYSTEM IS NORMAL **				
12:30:02PM	Wed 25-June-97			

Note:

If your system configuration does not match this sheet, consult Simplex for specific operations. Simplex is listed in the Yellow Pages.

In case of trouble, notify:

Name			
Address			
Phone#			

THESE INSTRUCTIONS ARE INTENDED TO BE FRAMED AND MOUNTED ADJACENT TO THE CONTROL PANEL FOR READY REFERENCE.

See Operator's Instruction Manual for detailed operation.

5 Simplex